



### Demontering af modtageren.

1. Håndtaget aftages ved et let tryk i pilen A's retning.
2. Efter aftagning af bundstykket fjernes skruerne nrk. B i begge sider.
3. Sidestykkerne kan nu fjernes ved først at forskyde dem i pilen C's retning og derefter ved et let træk i pilen D's retning.
4. De to kabinethalvdele fjernes ved at vippe dem i pilen E's retning.
5. Skalaen fjernes ved demontering af bøsningerne under de to store knapper. Viseren kan nu vippes op og topstykket fjernes.
6. Topstykket sidder fastspændt på chassiset med 4 skruer. Skruerne er placeret ved enderne af ferritanlæggen og ved de to tonekontroller.

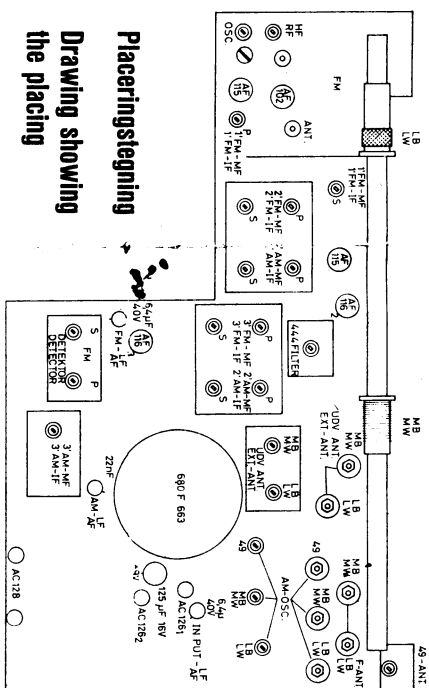

### Disassembling the Receiver.

1. Take off handle by pressing lightly in the direction of the arrow A.
2. Take off the bottom piece and thereafter remove the screws marked B (at both sides).
3. Remove the side members by sliding them in the direction of the arrow C and thereafter pulling lightly in the direction of the arrow D.
4. Remove the two halves of the cabinet by tipping them in the direction of the arrow E.
5. The scale can be removed by means of dismounting the bushings under the two big buttons. Now you can bob up the pointer and remove the top section.
6. The top section is held to the chassis by four screws near the ends of the ferrite aerial and the two tone controls.

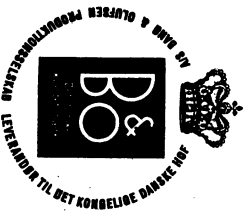

# BEOLIT 600