


Fig. 20 Chassis, viewed from below

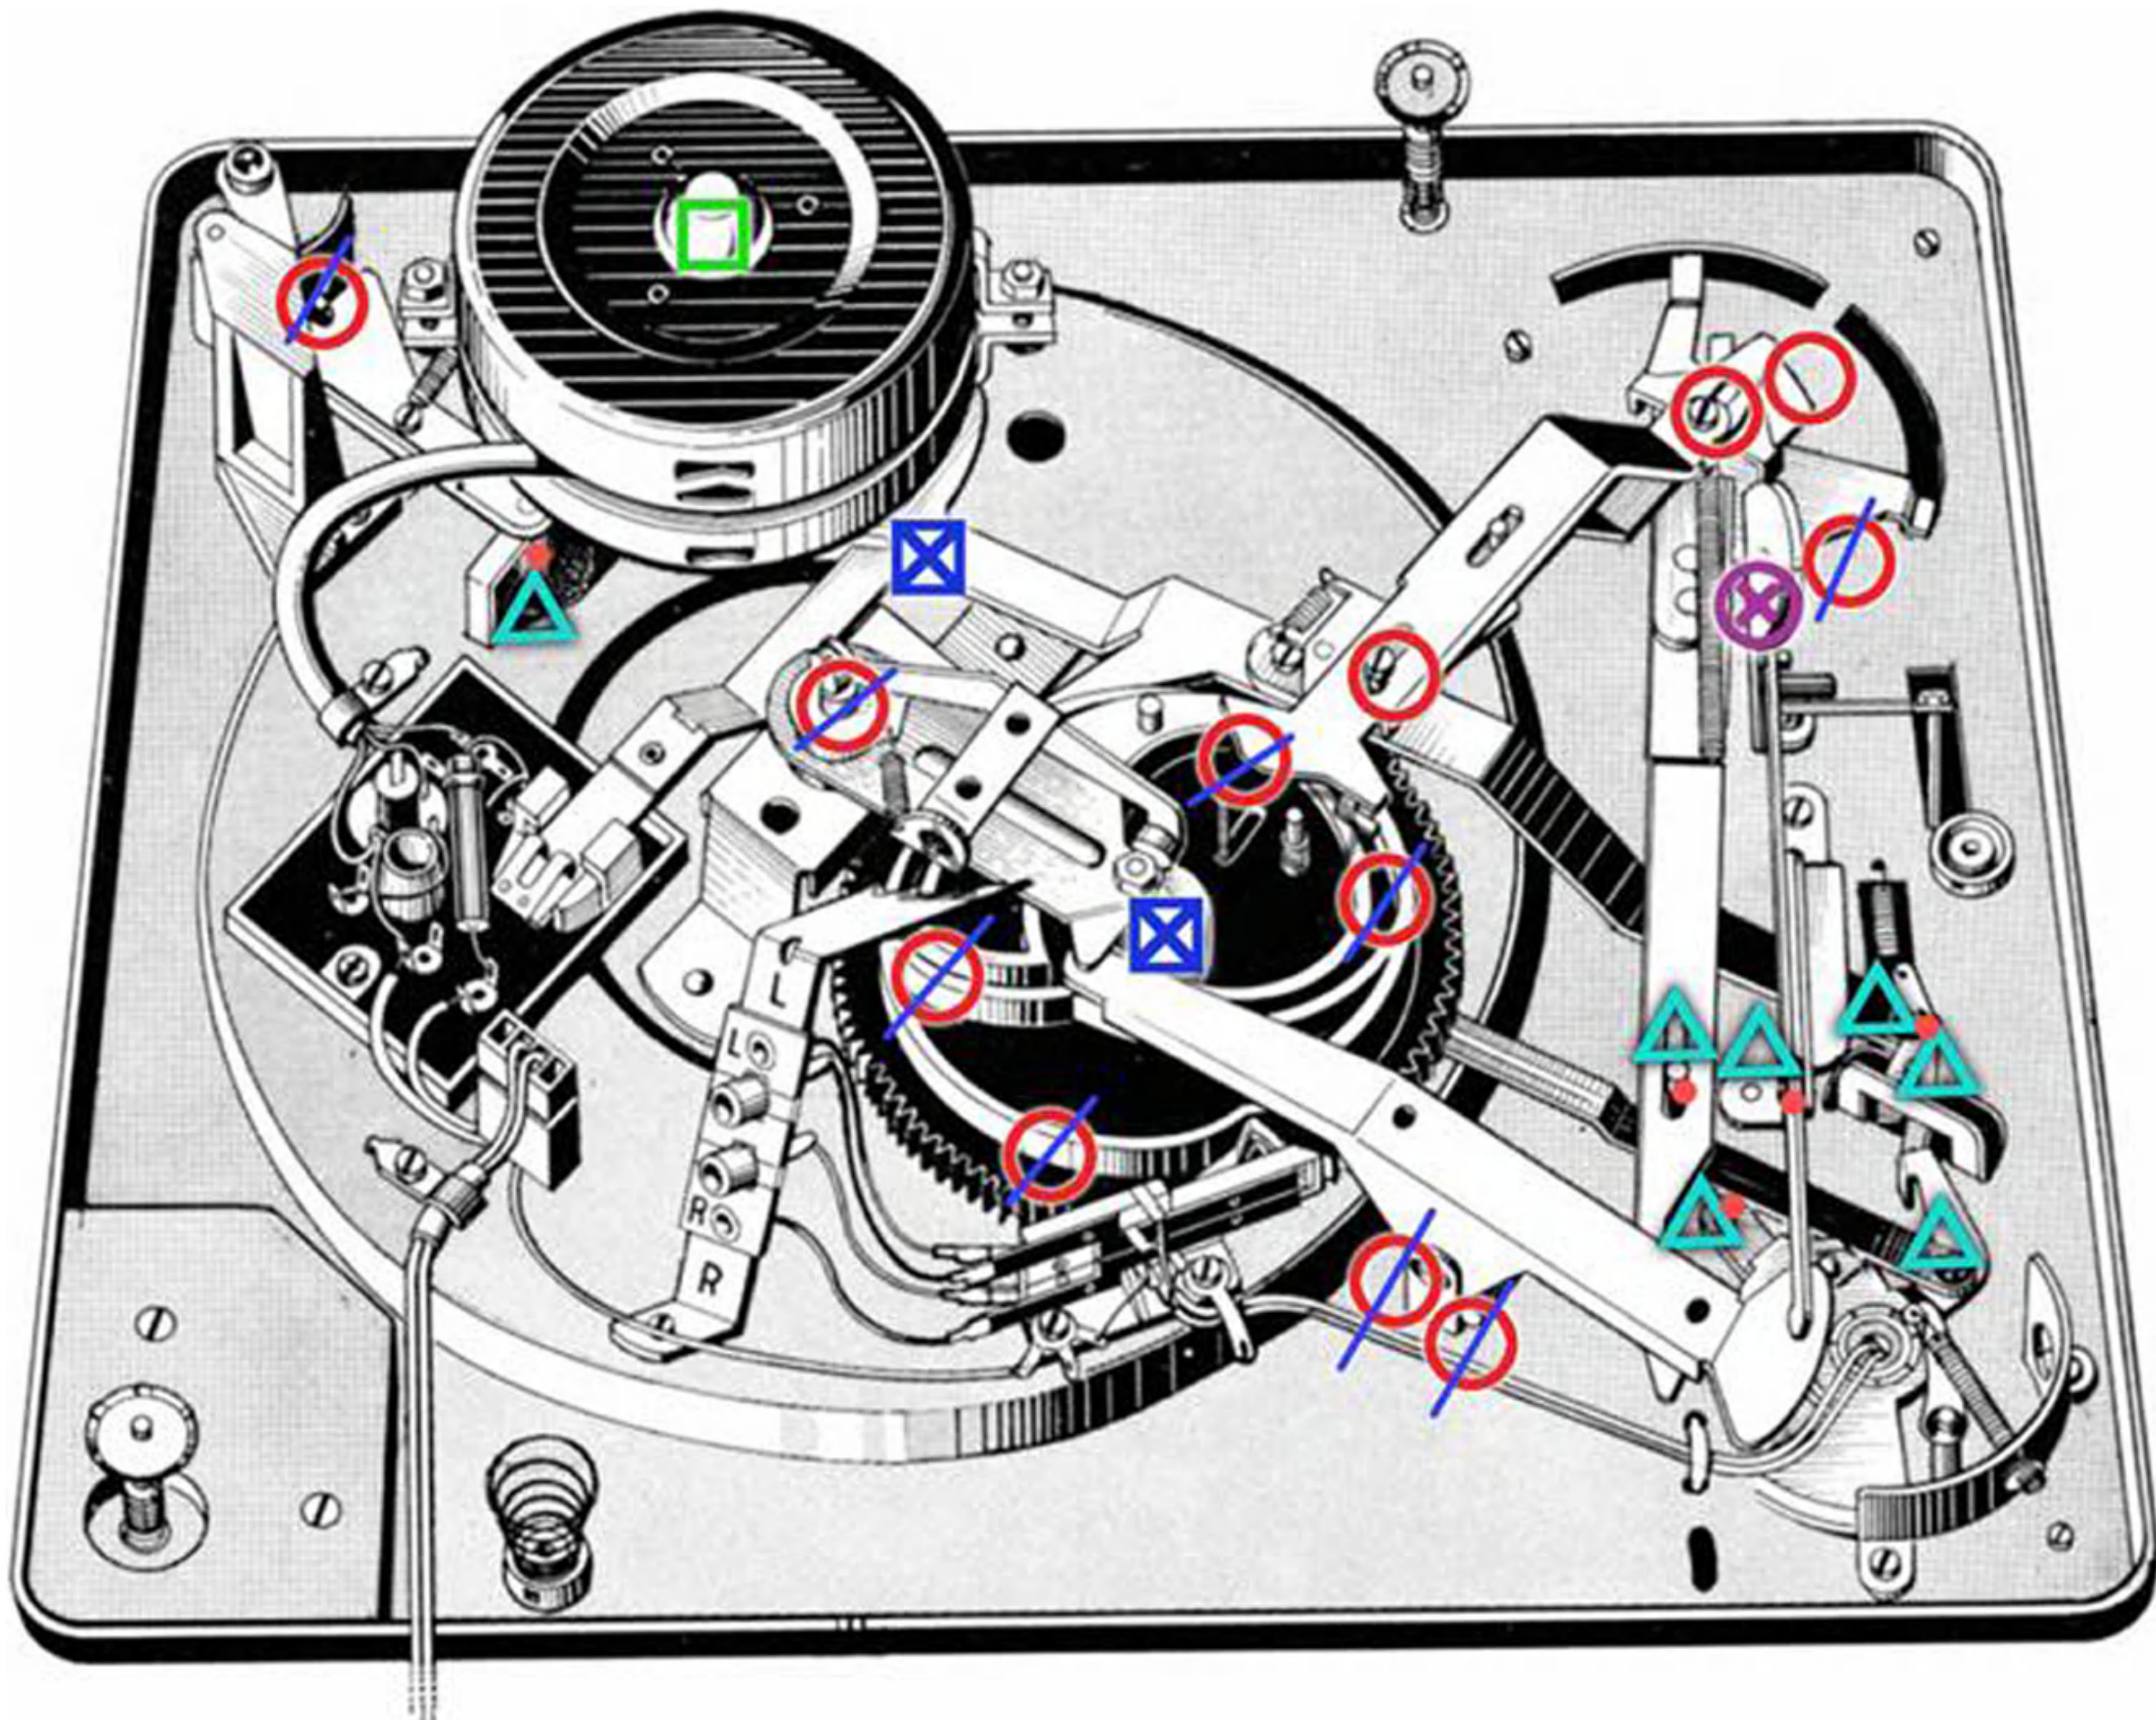

Use the following lubricants:

- □ Fine bearing oil. Shell Clavus 17. for motor bearings and sintered bearings.
- × Adhesive oil. Renotac. for turntable and drive wheel.
- / Molycote paste G. where greater pressure or friction occur.
- ⊕ Silicon oil Wacker AK 300.000
- ⊗ Shell Alvania Nr 2 / Gadus S2 V200 AC 2
- △ BP 10W40

Lubrication diagram from the Dual 1019 service manual
Original diagram is in BSW. colors in this diagram have been
digitally enhanced with color.
Diagram 2 of 2.
Full service manual can be found at: <http://www.viny1engine.com/>